

CYPHER User manual


Main Features:

1. 65% keyboard with ANSI or ISO layout
2. Cherry MX keyswitches
3. Dual layer PCB
4. Keycap material: PBT
5. Legends printed: Laser engraved
6. Split or standard spacebar for option
7. USB-C Interface
8. Full key programming by hardware
9. Support Vortexgear MPC online key-codes editor

Package Content:

1. Keyboard x 1
2. USB-C Cable x 1

Keyboard Layout:

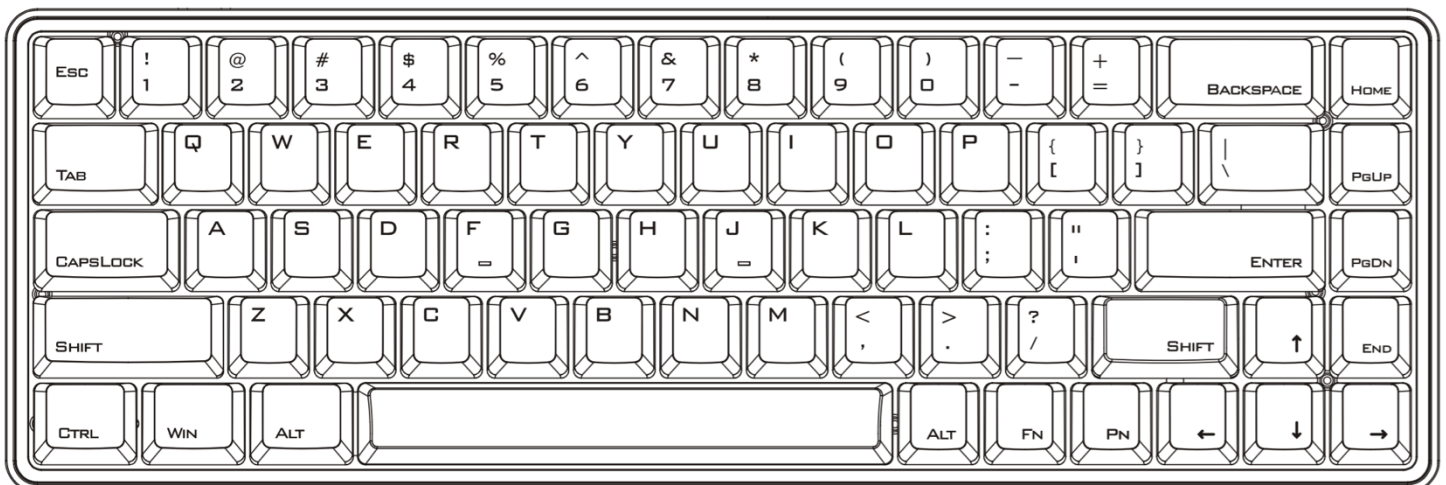

Fn + Control keys				Remark	
Fn	+	ESC	=	`	Key code Change
		1		F1	
		2		F2	
		3		F3	
		4		F4	
		5		F5	
		6		F6	
		7		F7	
		8		F8	
		9		F9	
		0		F10	
		- _		F11	
		= +		F12	
		P		Print Screen	
		[{		Scroll Lock	
] }		Pause	
		; :		Insert	
		' "		Delete	
		Z		APP	
		Q		Previous	
		W		Play/Pause	
		E		Next	
		S		Volume -	
		D		Volume +	
		F		Mute	
		L_shift + ESC		~	
		R		Restore to factory default	Clean single layer programmed key-codes
		T		Delay 15ms	Only valid in Programming Mode
G	Delay 0.1s				
B	Delay 0.5s				

1. Spacebar LEDs indicator:

a. Left side of LED - Switching Layers

Fn + M = None - Default layer

Fn + <, = Red color - Layer1

Fn + >. = Green color - Layer 2

Fn + ?/ = Blue color - Layer 3

b. Right side of LED - Switching Layout

Fn + Home = QWERTY(Default)

Fn + PgUp = Red color - COLEMAK

Fn + PgDn = Green color - DVORAK

Fn + End = Blue color - Windows lock

2. Caps Lock LEDs indicator:

a. White = Caps Lock on

b. Green = Programming mode on

c. Green & Red = Bluetooth mode only

3. Other instructions:

a. Programming steps please refer to POK3R's instruction

To enter programming mode, you have to hit Fn + L_Ctrl. Other steps like POK3R

b. Swap Fn or Pn location:

Fn/Pn + L_shift for 5 seconds then select new Fn/Pn key location

(LEDs under spacebar will on solid Blue when you swap Fn or Pn)